




#### Fleet Map

Simultaneously displays the current location of all vehicles selected. The icon shows the <u>status of the vehicle</u> and each vehicle is recognizable by <u>the label with the name</u> (customizable).



Image with exact Model and Vehicle Color

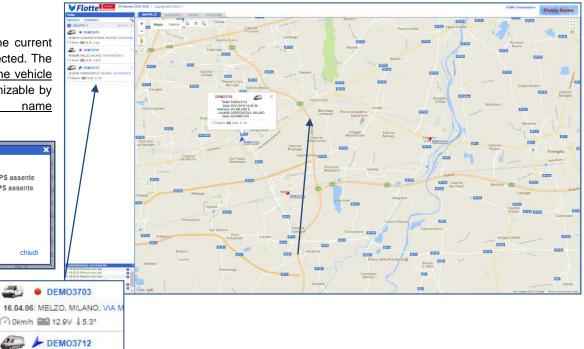

### **Position Detail Map with Temperature**

Just clicking on an address, or directly on the icon on the map of the vehicle fleet, a PopUp window appears with the detail map and instrument panel with address, status, speed, battery level of the vehicle and **temperature detected**.

16.05.56: GORGONZOLA, MILAN 7 52km/h 113.5V ↓ 1.8°

Useful to avoid "zoom" and "scroll" on the Fleet Map.

Provides the view:

- Map
- Satellite
- StreetView












## **Temperature Graphs**

Interactive graphs of the temperatures detected by all selected vehicles (not one at a time!) In the set date range. Scrolling the graph with the "mouse", a popup displays time and temperature detected.



### **Travels Report**


List of Trips made by all selected vehicles (not one at time!) in the date range set. Selecting the link "active map" the map appears with the layout of all journeys made on the day, with evidence of stops. Data printable and exportable in various format.

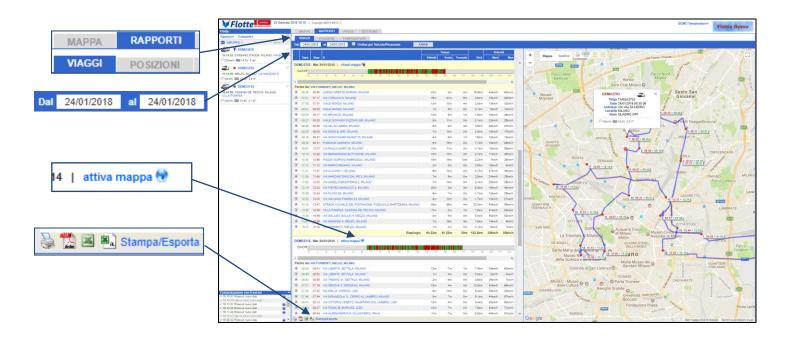



## **Travels Report: travel vehicle summary**

For each day that the vehicle has travelled displays graphics of Trip/Pause time and the list of trips made, with time departure, arrival, time travel, stop, km, average and maximum speeds.

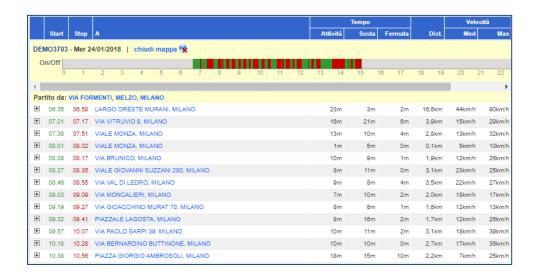


# Travels Report: Trip datails with map

Selecting the "+" on the left of a trip, a Trip Detail is displayed:

Shows all positions sent by the device during the entire trip, with indication of direction, speed and cumulated distance.




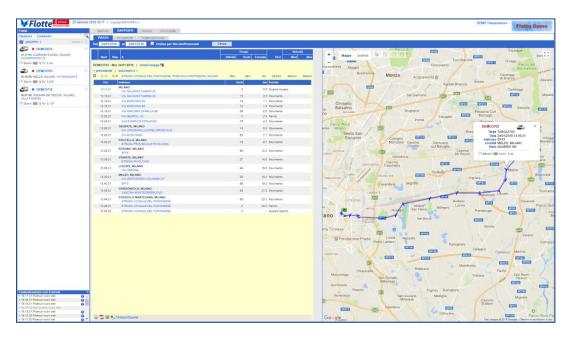



# **Positions Report**

Setting day, start time, minutes and hours interval, appear, for all selected vehicles (not one at time!), The positions sent by the devices in the selected period, with indication of direction, speed, measured temperature and message type (Ignition On / off, moving, stationary, etc.). Selecting the link "see" in the column map, the map is activated with all positions for the selected vehicle.

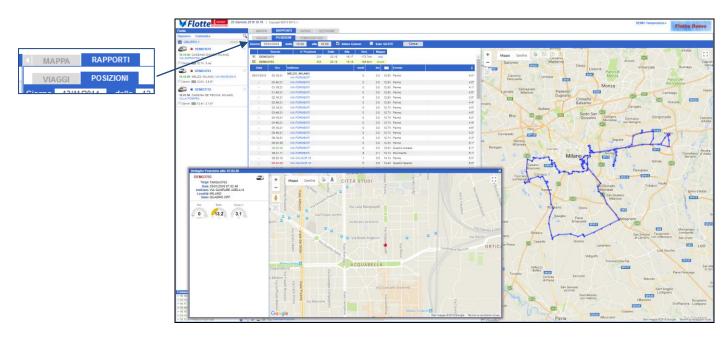

# **Management from Tablet or SmartPhone**

